


HydroTap® G4

User Guide

- Tap Operation.....(Pages 2-9)
- LCD Screen & Menu(Pages 10-21)
- Maintenance..... (Page 21-22)
- Menu Icons.....(Page 23)

Date of Installation...../...../.....

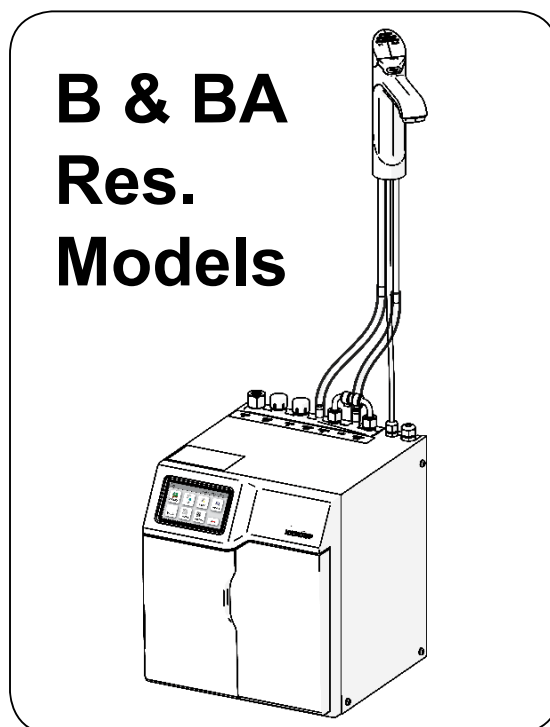

**Affix Model Number Label
Here**

802258NZ

zenith^o


Tap safety - Boiling Ambient

The safety lock feature is provided to prevent boiling water flowing if the hot lever is inadvertently operated.

This function can be activated and deactivated from either the Tap top controls or from the touch screen display (Located on the unit in the cupboard). In order to be able to change the safety lock settings, using the tap top controls, The control panel settings must first be set to YES (allow safety settings change).

To allow the safety setting to be changed using the tap top controls: (Classic, Elite & AIO)

1. Press [MENU] button for main menu.
2. Press [Setting] button.
3. Press [Safety] button.
4. Press button (A) - YES / NO to allow or disallow the safety setting to be changed on the tap.

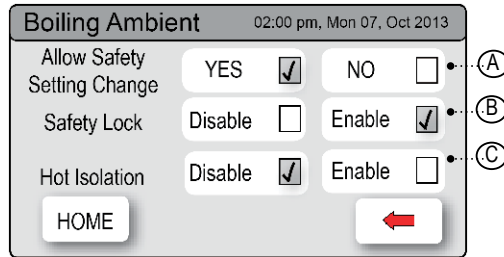

Note: The Factory setting is set at YES

To activate the safety using the tap top controls (Classic, Elite & AIO)

After selecting to allow the safety setting from the menu screen. Place a finger on the safety lock, then depress the Classic Blue Ambient lever or touch the Elite Blue/Ambient Button, while keeping both fingers in position for more than ten seconds. The Classic safety lock indicator light will now be illuminated or the Elite lights will flash, momentarily.



To deactivate the safety using the tap top controls (Classic, Elite & AIO)


First place a finger on the safety lock, then depress the Classic Blue/Ambient lever or touch the Elite Blue/Ambient Button, while keeping both fingers in position for more than ten seconds. The Classic safety lock indicator light will now extinguish or the Elite lights will flash, momentarily.

To control the safety (From the touch screen):

(see page 20)

For Hot Isolation:

Not for HydroTap Arc/Cube, (see page 20)

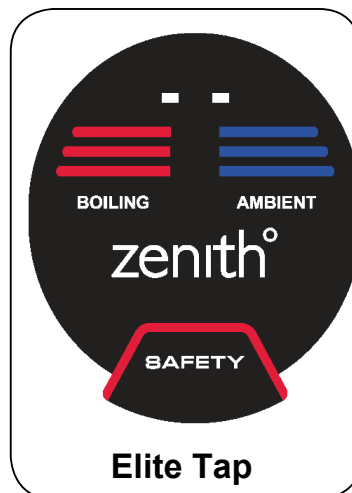

Tap Safety - Boiling Models


On Boiling Only models the safety lock feature is provided to prevent boiling water flowing if any of the Classic hot levers or Elite buttons are inadvertently operated.

The Safety Lock button on the tap can only be Disabled or Enabled from the LCD touch screen (Located on the unit in the cupboard). When Disabled, no water will be dispensed from the Boiling Hydrotap.

Boiling Models (Classic, Elite & AIO)

To set the safety using the touch screen:

1. Press the [MENU] button for main menu.
2. Press the [Setting] button.
3. Press the [Safety] button.
4. Press button (B) to Enable / Disable, the safety lock feature on the tap.

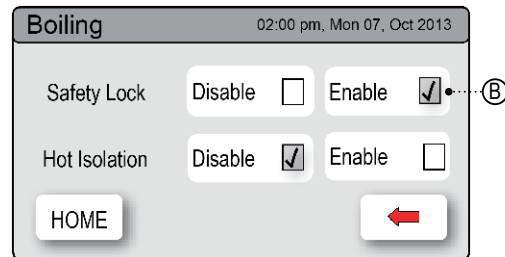

For HydroTap ARC/CUBE:

(Boiling Ambient and Boiling models)


The safety on the tap, can only be Disabled or Enabled from the LCD touch screen (Located on the unit in the cupboard).

Safety Sensor Calibration (lever models)

Light intensity varies from site to site, therefore it is recommended that a re-calibration be performed at the time of the installation.

All direct natural sun light must be shaded from the HydroTap, during the calibration. This can be achieved by closing any nearby curtains, blinds, etc. or by shading the tap with a dark cloth.

1. With the unit in Normal operating mode and with the safety enabled
2. Turn the power OFF
3. Pull both tap levers to the forward position
4. Turn ON the power
5. The unit will calibrate the safety switch
6. Return the levers to the neutral position.
7. To check the calibration, dispense Boiling water, in normal light conditions with the safety enabled.

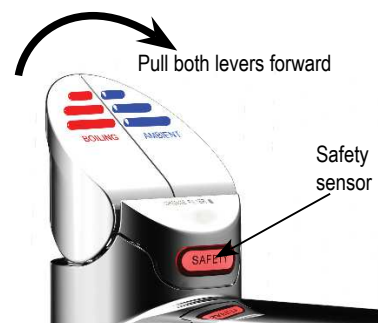

Tap functions

Elite Tap:

The Elite tap uses touch sensitive controls, to dispense Boiling, and Ambient water.

When operating the tap, ensure the touch surface is dry as moisture may interfere with the sensor touch control.

The safety lock can be controlled from either the tap or from the touch screen display in the same way as the Classic tap (See page 2)

NOTE:

The safety switch is always active on Boiling Only models




All-In-One Tap:

The top of the All-In-One tap is operated the same as a Classic HydroTap.

The two levers are used for dispensing Boiling and Ambient water. The safety button operating in the same way as on the HydroTap.

The Mixer tap lever is operated as a classic 'Flick Mixer'. The hot side is marked with a red mark and the cold side with a blue mark, for dispensing cold to warm water.

Lifting the handle up will decrease the flow rate and lowering the handle will increase the flow rate. Lift the handle all the way up to turn the tap off.

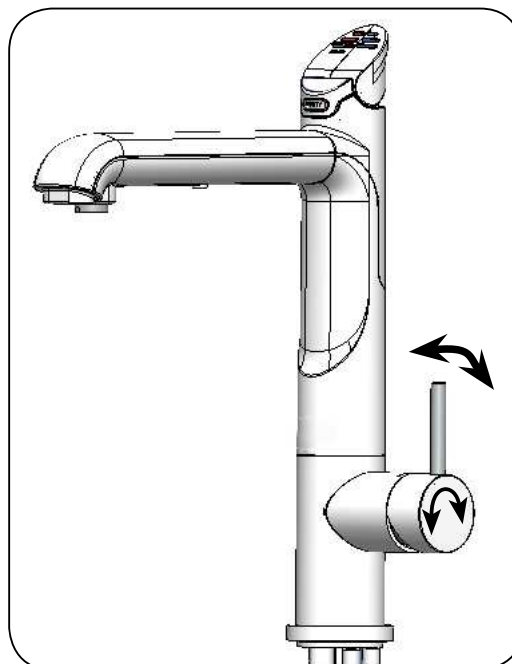

When the handle is moved towards the blue mark, the temperature is decreased and when moved towards the red mark, the temperature is increased. The final temperature will be dependant on the temperature of the incoming cold water.

For convenience, the spout may be swivelled, left or right through 120°.

Tap functions


HydroTap Arc/Cube:

On powerup, wait 30 secs. for the unit to calibrate itself. Tapping the select button will allow the choice of Boiling (RED) with safety or Ambient (BLUE) water modes. The Arc/Cube control may be rotated in a forward or reverse direction to dispense Boiling or Ambient water.

The rotary control is spring loaded in the anticlockwise direction and when released, will return to the OFF position. When rotated clockwise the tap operates in a "Pot fill" mode. Water will flow from between 5 and 15 seconds (This is user adjustable). To reset, return the handle to the "Off" position and repeat the step. The lever has to be manually returned to the "Off" position.

After activating the Boiling mode, all the lights will flash for 2 seconds, during which time you may dispense water. When the rotary control is returned to the Off position the light will continue to flash for an additional 3 seconds, allowing you to dispense more water.


When unattended, the control light will automatically default to the Ambient(-BLUE) mode after 30 seconds.

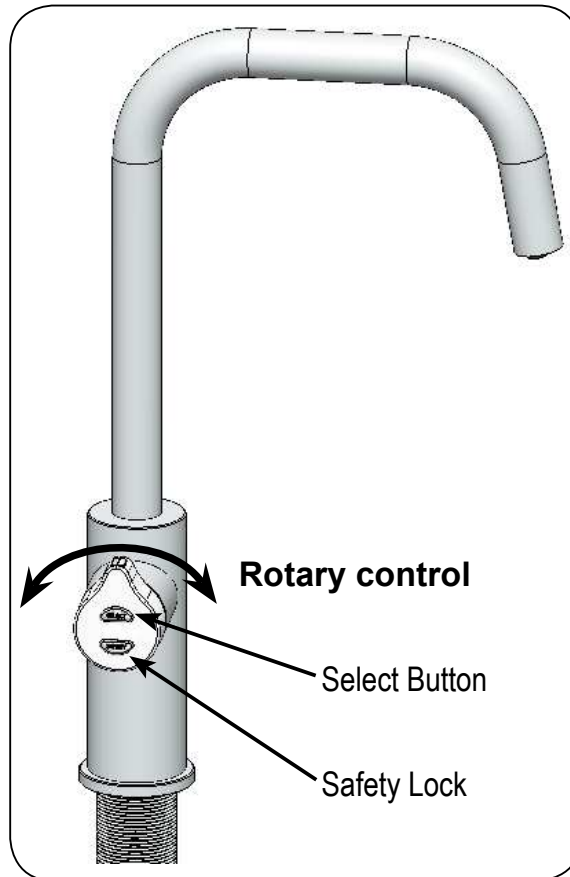

MixerTap:

Lifting the handle up will decrease the flow rate and lowering the handle will increase the flow rate. Raise the handle all the way up to turn the tap off.

When the handle is moved towards the BLUE mark, the temperature is decreased and when moved towards the RED mark, the temperature is increased. The final temperature will depend on the temperature of the incoming cold water.

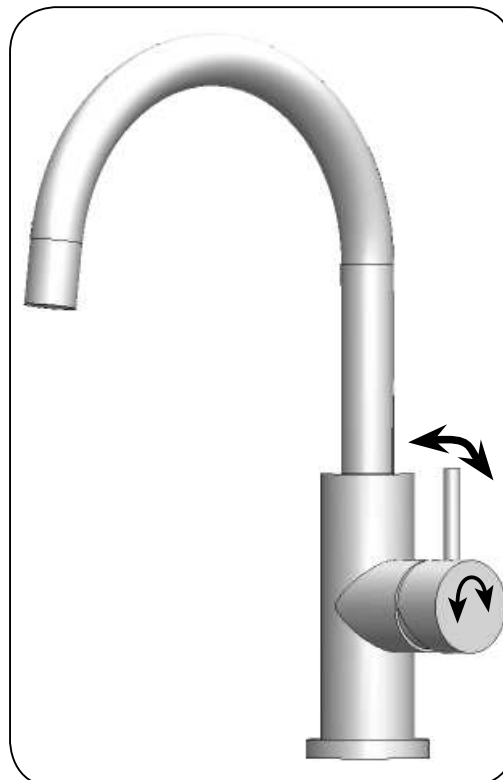

Tap operation

To dispense boiling water: (With the safety OFF)

HydroTap Classic:


Depressing the Red lever allows the dispensing of boiling water.

Pulling forward the Red lever allows the tap to operate in a “no-touch” mode.

Water will flow from between 5 and 15 seconds (This is user adjustable).

To reset, return the handle to the “Off” position and repeat the step. The lever has to be manually returned to the “Off” position.

Classic Tap

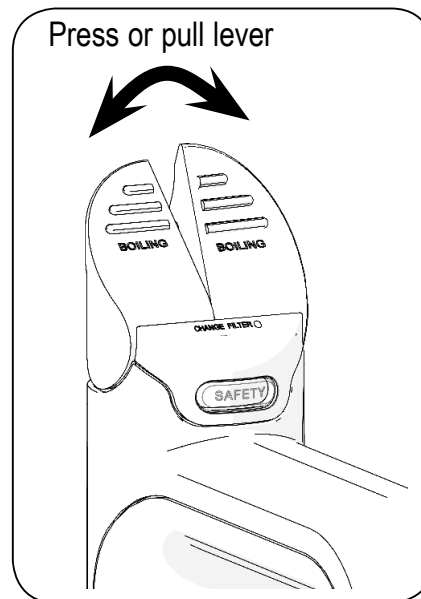


Elite Tap:

Touching the boiling button allows the dispensing of boiling water.

HydroTap Arc/Cube:

If not showing RED, tap the select button until the indicator light turns RED.

Rotating the control, when the indicator light is RED, allows the dispensing of boiling water.

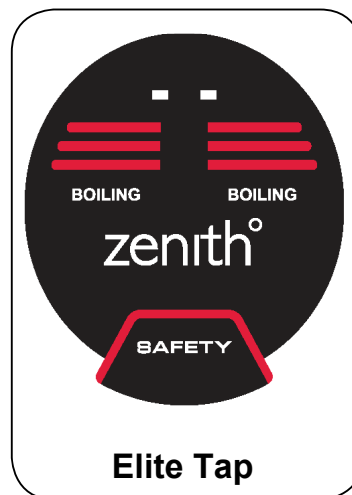

To dispense Boiling water: (With the safety ON)

HydroTap Classic:


Depress the Red lever, while simultaneously covering the safety lock button with a second finger. These two actions need to occur within 2 seconds for the successful dispensing of boiling water.

Elite Tap:

Place a finger on the safety lock, then touch the boiling button, while keeping both fingers in position.

HydroTap Arc/Cube:

First tap the select button until the indicator light turns RED. Then tap the safety button twice until the RED light flashes (This will flash for approx 1-3 seconds if no water is being dispensed). Boiling water may be dispensed by rotating the control while the RED light is flashing.

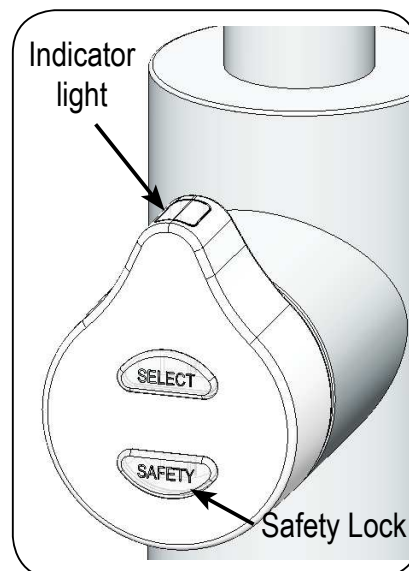

Arc/Cube Tap

Tap operation

To dispense Ambient water:

Classic Tap


HydroTap Classic:

Depressing the Blue lever allows the dispensing of Ambient water.

Pulling forward the Blue lever allows the tap to operate in a “no-touch” mode.


Water will flow from between 5 and 15 seconds (This is user adjustable).

To reset, return the lever to the “Off” position and repeat the step. The lever has to be manually returned to the “Off” position.

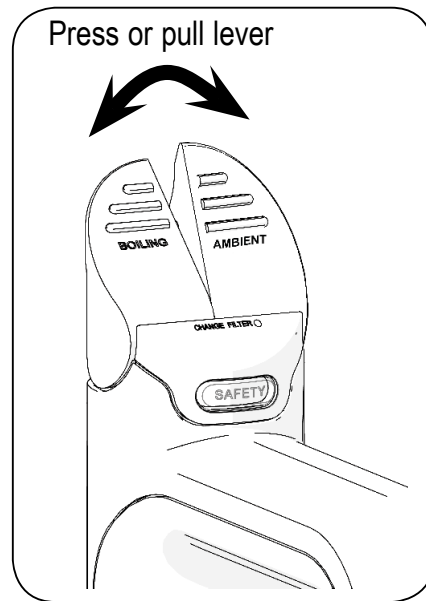

Elite Tap:


Touching the Ambient button allows the dispensing of Ambient water.

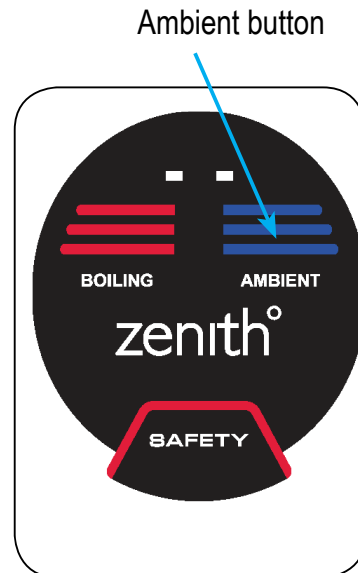

HydroTap Arc/Cube:

If not showing Blue, tap the select button until the indicator light turns Blue.

Rotating the control, when the indicator light is Blue, allows the dispensing of Ambient water.

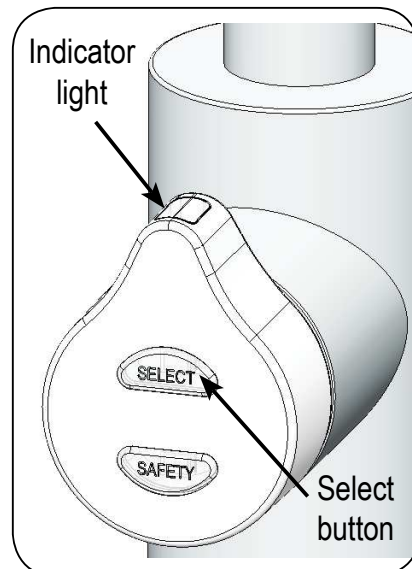

Arc/Cube Tap

Filter lights


Filter light: Classic & Elite

Filter Change Light Off:

This indicates the filter is operating within its normal specified lifespan.


Filter Change light flashing slowly:

The light will flash slowly when the filter is due for replacement and the LCD will show "Filter Change". Refer to "Replacing the filter" in section 'C' of this document.

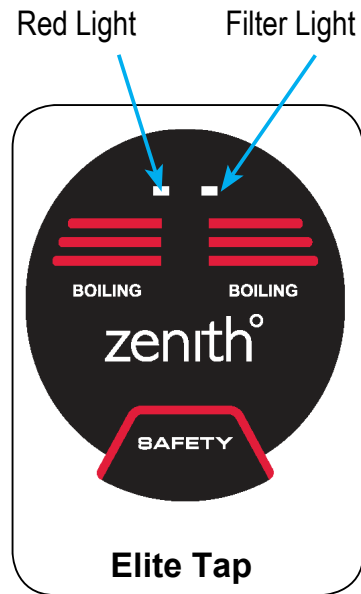


HydroTap Arc/Cube Flashing filter lights:

All three tap lights (Safety; Select and Indicator light) will flash every 10 seconds, indicating a Filter change is required.

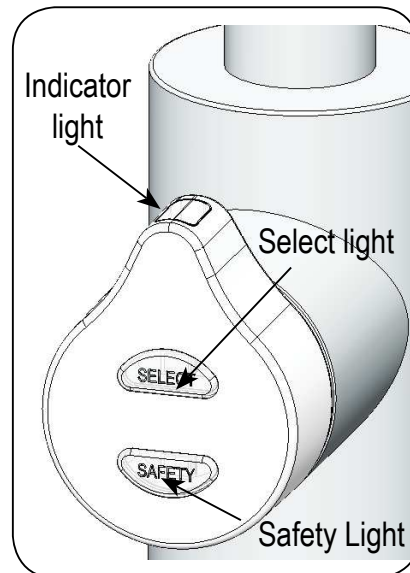

Turn filter light OFF: (All models)

Refer to "Filter Reset" in section 'C' of this document.

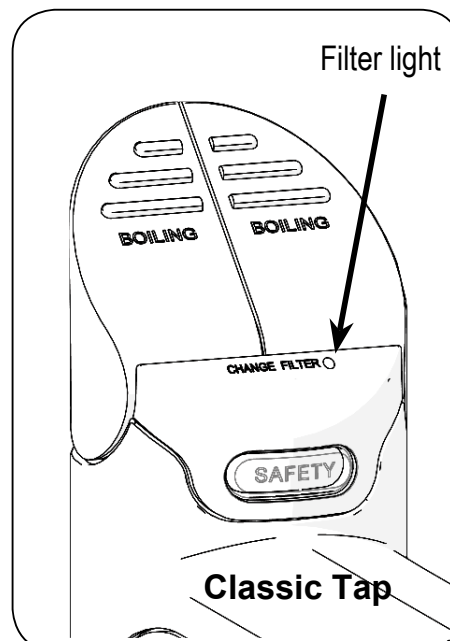

Tap Lights

Red Boiling Water Light

(All)

On all the time:

This indicates that the boiling water is ready.

Flashing slowly:

This indicates that the boiling water is below the desired temperature.

Wait for the light to stop flashing before dispensing water. The flashing light will typically occur after switching on, or coming out of sleep mode.



Blue Ambient water Lights:

(Not available on Elite)

On all the time:

This indicates that the Ambient water is ready.




Warning: (All)


Flashing warning light:

When the indicator light flashes fast and continuous, a system fault has occurred. Check for details on the faults screen. If unable to rectify, call a qualified service agent.

Red Light Filter Light

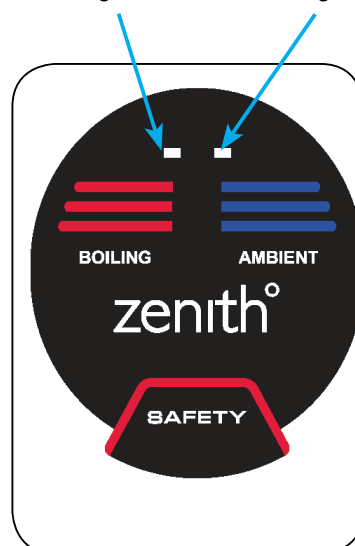

LCD Screen

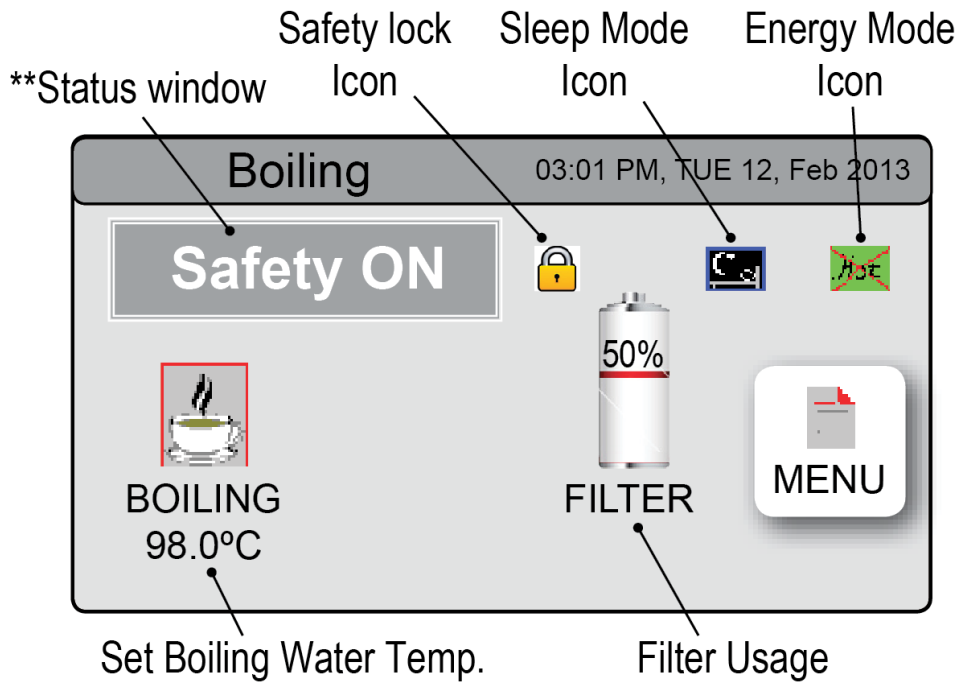

Zenith HydroTap introduces a 'TOUCH' screen for easy setup and operation adjustment. See page 23 for icon details.

Other possible messages in status window:

**Status	Information	Notes
Safety OFF	Product is in normal operation mode	-
Safety ON	Safety lock is activated	Refer to section G - safety
System Fault	Product has one or more system faults	Refer to section B faults
Sleep Mode	System is in sleep mode. Boiling water or hot water is not available.	Refer to section G - Energy mode
Change Filter	External/Internal filter needs to be replaced	Refer to section C
System Off	System off in off mode. No boiling water or chilled water available.	Refer to section G - Energy mode
Hot Isolated	Hot isolation has been activated. Boiling water or hot water is not available.	Refer to section G - Safety


Note: When selecting Menu options, the screen will revert to the main menu, if the screen remains inactive for a period, in excess of 10 seconds.

LCD Screen Menu

Main Menu	Sub Menu	Sub Menu Options	Section
Language	<ul style="list-style-type: none"> English Deutsch 		A
Information	<ul style="list-style-type: none"> Product Info System Faults Event Log 	<ul style="list-style-type: none"> Product serial No. Lists 	B
Installation	<ul style="list-style-type: none"> Filter Flush Filter Reset Boiling Calibration Booster Lux sensor calibration 	<ul style="list-style-type: none"> Reset options Calibration options 	C
Service	Password protected		D
Security	<ul style="list-style-type: none"> Enable Password 	<ul style="list-style-type: none"> Set Password Change Password 	E
Communication	<ul style="list-style-type: none"> Remote Monitor Remote Control 	<ul style="list-style-type: none"> Wifi Options Wifi Options 	F
Settings	<ul style="list-style-type: none"> Date/Time Temperature Filter Energy Modes Safety Dispense Times 	<ul style="list-style-type: none"> 12hr/24hr Mode Hot/Cold Setpoint Filter Life (Litres) Filter Life (Months) Sleep Mode Options Safety Lock Hot Isolation Hot/Cold Dispensing 	G

LCD Screen operation - Section A

A Set Language

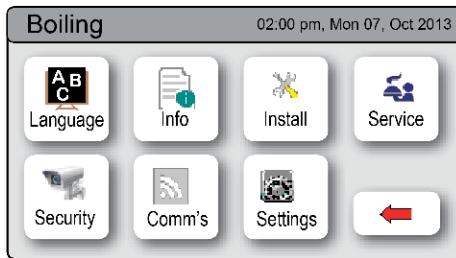


1. Press [MENU] for main menu.
2. Press [Language] button.
3. Select the country to change the language
4. Press [=] button for the previous menu


LCD Screen operation - Section B

B System Information


In this section, you can find your product serial number , check system fault messages or view the event logs of your product.

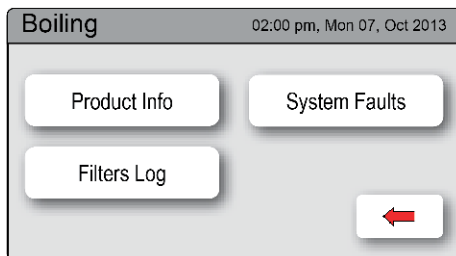


1. Press the [MENU] button for main menu.
2. Press the [Info] button to view the product serial number and other key information

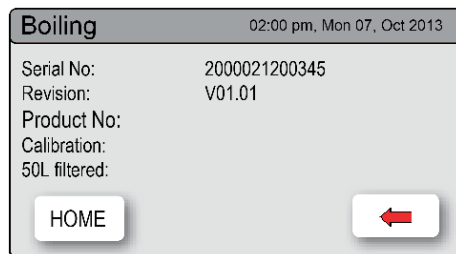

1. Press [Product Info] to view the current product information.
2. Press [=] button for the previous menu or press [Home] button to return to the home screen.

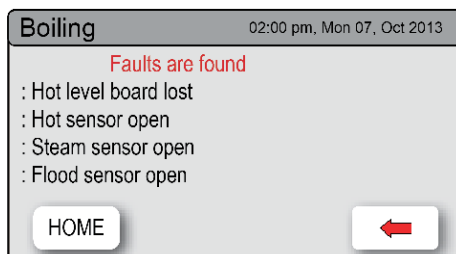

1. Press [System Faults] to check the faulty information;
2. Press [=] button for the previous menu or press [Home] button to return to the home screen.

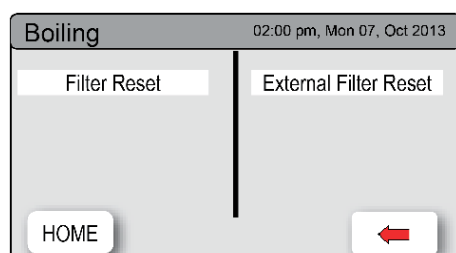


1. Press [Filter Log] to view the system's filter logs
2. Press [=] button for the previous menu or press [Home] button to return to the home screen.

LCD Screen operation - Section C

C Install

Once your Zenith HydroTap G4 unit has been installed, Go to Install menu to configure the system settings for your product.

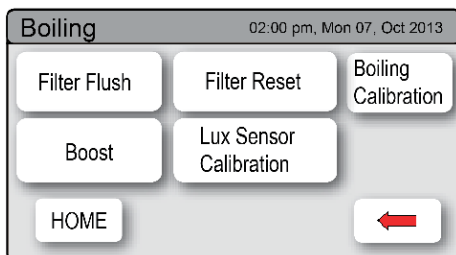


Sub menu:

1. - Filter Flush
2. - Filter Reset
3. - Boiling Calibration
4. - Booster
5. - Lux Sensor Calibration


1 - Filter Flush

Have a 10L bucket or similar container (not supplied) at the ready to hold a quantity of water that will be ejected while the Filter Flush Mode is in operation. Open the filter access door on the front of the HydroTap and the filter cartridge will be exposed. Located to the rear RHS of the cartridge is a flush line, approx 600mm long and the flush line stop cock. Place the valve end of the flush line into the bucket or container.

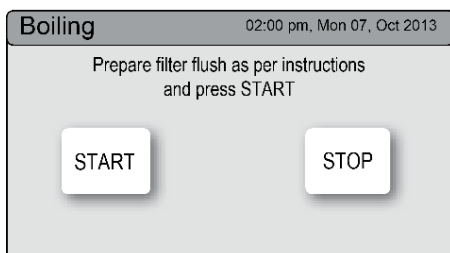

Note: Run at least 10 Litres of water through to flush the filter of any excess black carbon particles (this is normal). Once the filter flush has finished, press the Stop button to display the main menu

1. Press [MENU] button for main menu.
2. Press [Install] button. Turn the stop cock ON.
3. Press [Filter Flush] button.
4. Press [Start] button to start filter flush. Once the filter flush is finished, Turn the stop cock OFF first (to ensure the cock is properly closed) then press [Stop] to end filter flush mode.
5. Press [<=] button for the previous menu or press [Home] button to return to the home screen.
6. After initial installation, Turning OFF the Filter Flush Mode puts the HydroTap into calibration mode. With subsequent filter changes, the system reverts to the main menu.

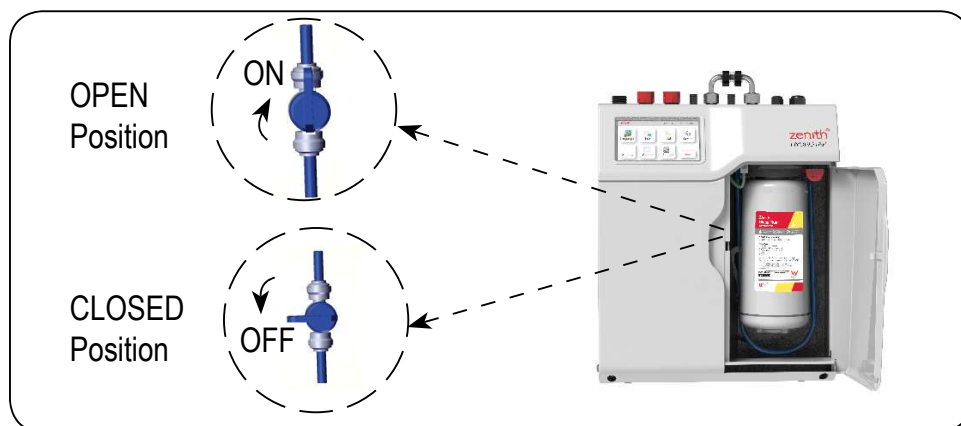


The Zenith HydroTap allows the user to adjust the filter life and to edit the filter usage. (See filter details on Page 17).

LCD Screen operation - Section C

2. - Filter Reset

After replacing the filter, the counters should be reset

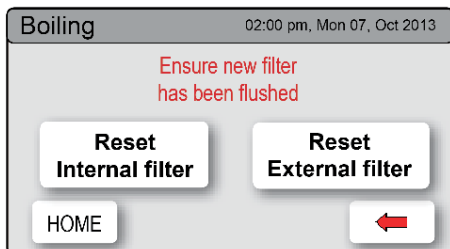


1. Press the [MENU] button for main menu.
2. Press the [Install] button.
3. Press the [Filter Reset] button.
4. To set the filter life or edit filter usage, refer to section G- Filter.

3. - Boiling Calibration

Caution: During calibration, boiling water units may vent steam from the tap spout. Take care to avoid personal injury whenever this occurs.

On start up, the Zenith HydroTap starts a self-calibration program. The controls take the system through the calibration process. Once complete, the system reverts back to normal operation. If you would like to calibrate the system anytime after initial installation, please follow the steps below.

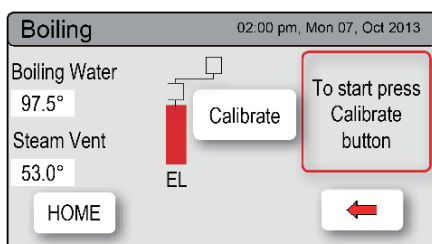


Boiling Calibration Screen

1. Press the [MENU] button for main menu.
2. Press the [Install] button.
3. Press the [Hot Calibration] button.
4. In the next screen, press [Calibrate] if you want to start calibration.

4. - Booster

This function should only be considered when a Booster unit is installed.

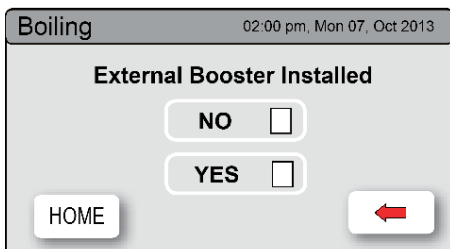


G4 HydroTap Booster Screen

1. Press the [MENU] button for main menu.
2. Press the [Install] button.
3. Press the [Booster] button.
4. If a Booster is installed, select YES to enable the Booster.
5. Dispense boiling water for 30 secs and check the outlet hose from the Booster is warm.
6. Otherwise select NO, if no Booster is installed

Note: Failing to make the correct selection for 'Booster' will effect product performance.

5 - Lux Sensor Calibration

NOTE: Conduct calibration under normal light conditions

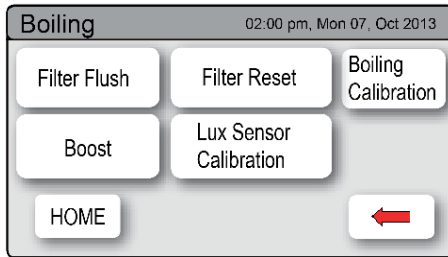

1. Press [MENU] button for main menu.
2. Press [Install] button.
3. Press [Lux Sensor Calibration] button.
4. The lights on the Tap head will flash to confirm calibration.
5. Check for correct tap operation by selecting 'Lux Sensor-> OFF'. When the room is darkened (below the calibrated light level), the tap lights will turn OFF after approx 30 seconds.

LCD Screen operation - Section D


D Service

This section is reserved for service technicians only

Note: In Australia call a licensed electrician, plumber, or Zenith office on 1800-638-633, for assistance, service, spare parts, or enquiries.


E Security

The Zenith HydroTap G4 allows the appliance coordinator to set up a password to protect against users changing the preferred system settings.

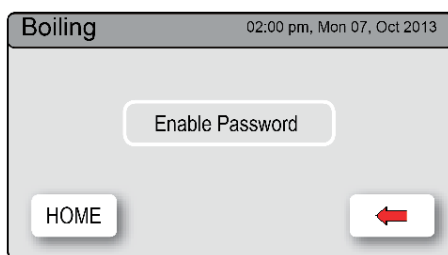


To set a password

1. Press the [MENU] button for main menu.
2. Press the [Security] button.
3. Press [Change Password]
4. Enter a 4 digit password

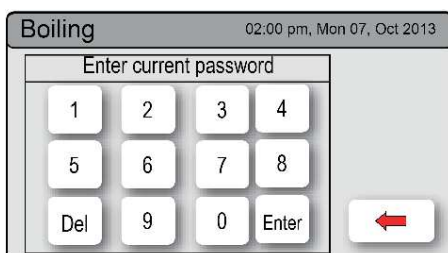

To change a password


1. Press the [MENU] button for main menu.
2. Press the [Security] button.
3. Press [Change Password]
4. Enter your old 4 digit password
5. Then enter your new 4 digit password. You will need to enter your password to access the settings screen. If you have forgotten the password, please disconnect the power and restart your HydroTap unit.

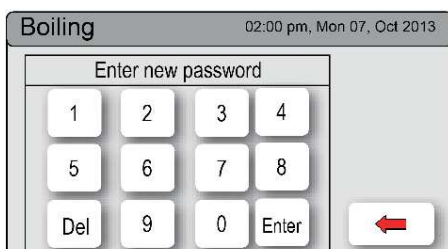

LCD Screen operation - Section F

F Communication (when available)


The Zenith HydroTap G4 allows the user to use wifi or Bluetooth to operate the product remotely.

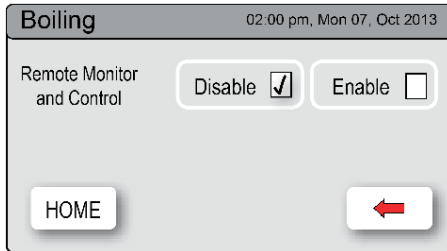


Not yet available

LCD Screen operation - Section G

G Settings

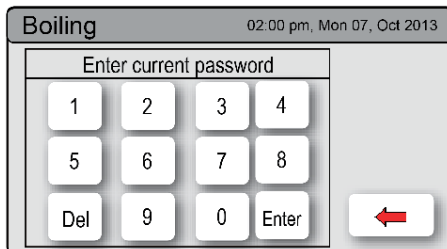


1. Press the [MENU] button for main menu.
2. Press the [Settings] button.
3. Press [Enable Password].
4. Then enter your 4-digit password.

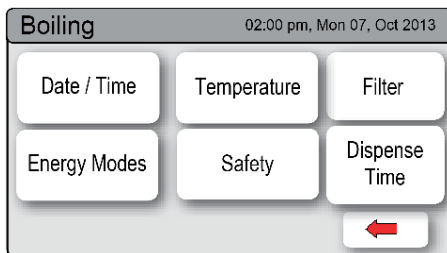


You will need to enter your password to access the settings screens. If you have forgotten the password, please disconnect the power and restart your HydroTap unit.

Set Date / Time

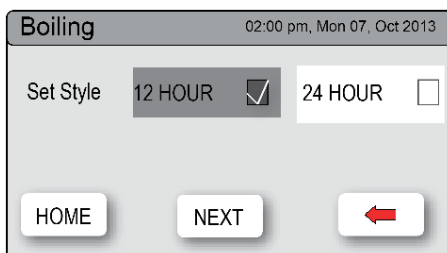

G4 HydroTap Set Date/Time Screen

1. Press [MENU] button for main menu.
2. Press [Setting] button.
3. Press [Date/Time] button.
4. Select 12 hour mode or 24 hour mode. The selected mode will be displayed in dark grey colour with a tick box on the right.
5. Press [NEXT] button to set time.

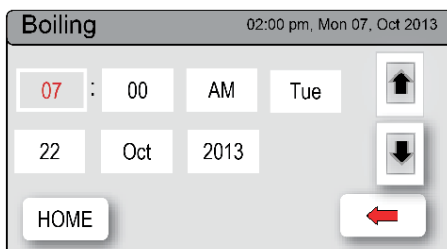


1. Select individually the hour, minutes and day and adjust using the up and down arrows.
2. Select individually the date, month and year and adjust using the up and down arrows.
3. Press [HOME] to return to the Home screen.

LCD Screen operation - Section G

Set Temperature


Zenith HydroTaps are designed to operate within 1°C to 2°C of set point for boiling water. All boiling water units are self calibrating to 98°C, which is the recommended setting. Adjustments to the 98°C setting are not recommended however, under certain circumstances adjustments may be made between 68° - 100°C. It should be noted that a 6% energy saving in standby power can be achieved when the 98°C setting is selected over the 100°C setting. Furthermore, the 100°C setting is not recommended as the delivery rate of water may be affected.

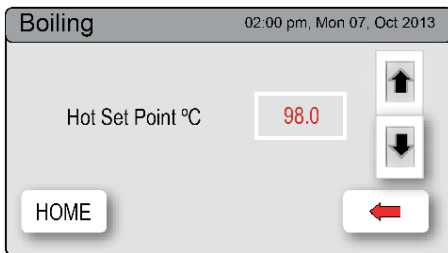

1. Press the [MENU] button for main menu.
2. Press the [Temperature] button.
3. To adjust the temperature, press the relevant temperature button and then use the up and down arrows.


Filter

Zenith HydroTap G4 allows the user to adjust filter life and edit filter usage.

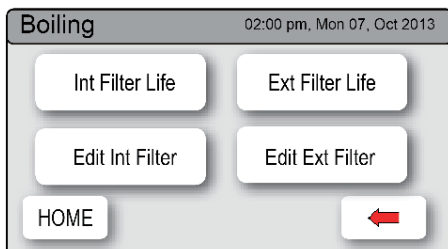


Note: The filter life may be set as a function of Litres used, or in months from the filter change. When the first of these functions is reached (i.e. Litres or months expired), the filter warning light will be illuminated on the tap. Either of these functions may be disabled (See below).

To edit the filter life:

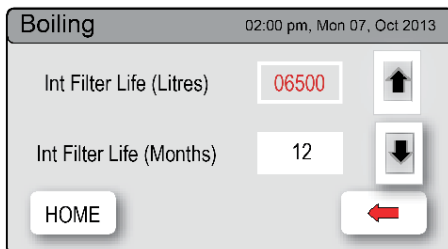


1. Press [MENU] button for main menu.
2. Press [Setting] button.
3. Press [Filter] button.
4. Press [Filter Life] button, for Internal or External filter.
5. To change filter life, first select filter life (Litres) or filter life (Months), then adjust using the up or down arrows.

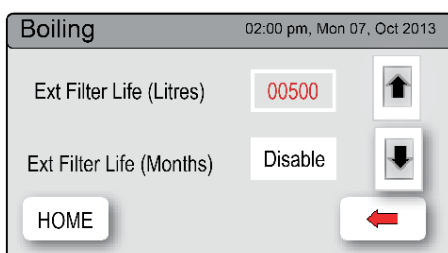

Note: Filter Life increases in 500 litre increments to a maximum of 10000 litres. Factory set at 6000 litres.


LCD Screen operation - Section G

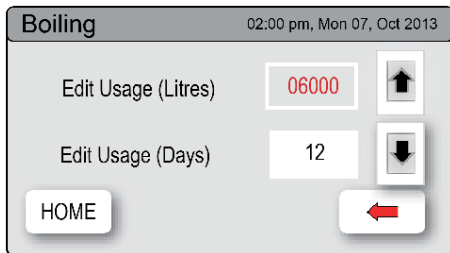

To edit the filter usage:

This function is to reset the Filter Change display after a filter has reached the end of its life (refer to “Replace Filter Instructions” section of this document).

1. Press the [MENU] button for main menu.
2. Press the [Setting] button.
3. Press the [Filter] button.
4. Press the [Edit Filter] button for Internal or External filter.
5. To edit, select Edit Usage(Litres) or Edit Usage (Months), then adjust using the up or down arrows.

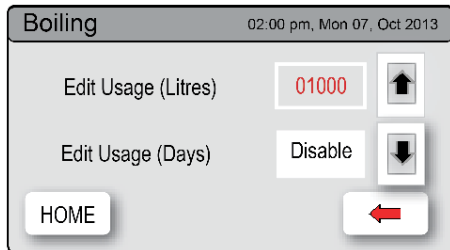


Energy Modes

This mode allows the HydroTap to Go into Energy Saving mode. There are two options available: ‘Sleep’ mode and ‘ON/OFF’ mode.


In Sleep Mode the unit will Go to “Sleep” after a 2hr period of inactivity. The Boiling water will gradually drop to either 68°C or room temp, as shown in the table below and the Chilled water will be ON or OFF.

When the period of inactivity passes, the home screen status window will show “Sleep Mode”.

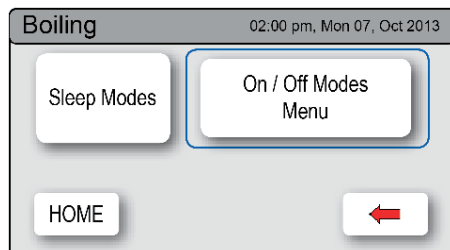

To activate the sleep mode:

1. Press [MENU] button for main menu.
2. Press [Setting] button.
3. Press [Energy Modes] button.
4. Press [Sleep Modes] button then in the next screen, use the up and down arrows to select one of the 7 options, as shown in the table below.

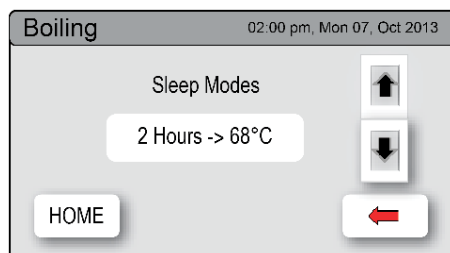

Sleep Mode	Light Level	Time Delay	State	Boiler	Chiller
2 Hours-> 68°C	N/A	2 Hr	Sleep	68°C	ON
2 Hours-> OFF	N/A	2 Hr	OFF	OFF	OFF
Lux Sensor->68°C	Dark	N/A	Sleep	68°C	ON
Lux Sensor-> OFF	Dark	N/A	OFF	OFF	OFF
Lux or 2 Hr-> 68°C	Dark	2 Hr	Sleep	68°C	ON
Lux or 2 Hr-> OFF	Dark	2 Hr	OFF	OFF	OFF
Disable	N/A	N/A	ON	ON	ON

LCD Screen operation - Section G


Lux (Light) Sensor Calibration: (Not for Elite tap)

It is recommended to recalibrate the Lux (Light) Sensor after selecting any of the 4 Lux sensor options from the sleep mode menu. Before commencing, ensure there are 'Normal to Dim' (Not Dark) operating light conditions.

Note: Any attempt, during OFF mode, to dispense water, will bring the unit out of sleep mode. The unit will return to sleep mode after 2 hours of non use. Please allow sufficient time for the water to reach the set temperature after disabling the sleep mode.


In ON / OFF Mode the user may turn the unit ON or OFF at specific times for individual days or alternatively by weekly and/or weekend settings.

To activate ON/OFF mode:

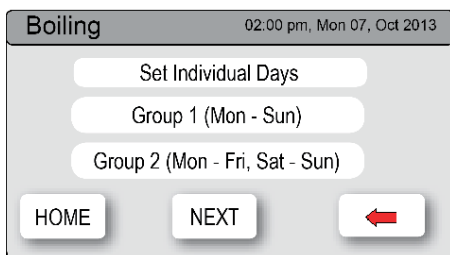


1. Press the [MENU] button for main menu.
2. Press the [Setting] button.
3. If required, Enter your 4 digit password
4. Press the [Energy Modes] button.
5. Select 'Individual set' if you wish to allocate a specific time for each day.
6. Select 'group set 1' if you wish to allocate the same time to all 7 days
7. Select 'Group set 2' if you wish to allocate the same time to the 5 working days (Mon-Fri) and additional times for (Sat-Sun).

Individual days set screen

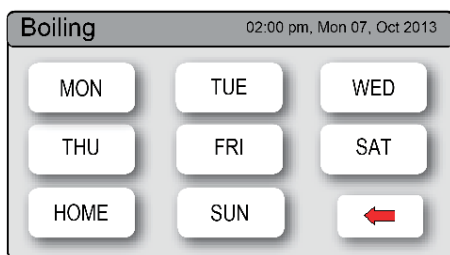

This screen allows you to select the individual days for programming. Only one ON /OFF period is allowed for each day.

Group set screen

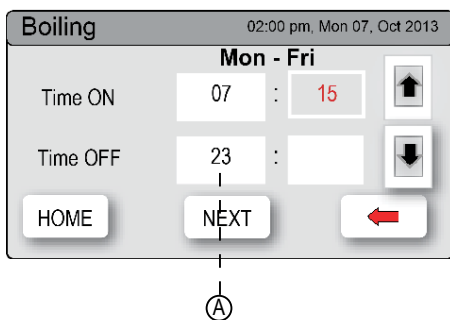

1. Press Group 1 or Group 2 option
2. Press button (A) to enable / disable group set. When the enable box is ticked, this allows each individual day to have an "On/Off" time.
3. Press [ON/OFF Modes] button, to set up ON/OFF time.
4. When in Group 2 Press [NEXT] to select Sat-Sun options

Note: Any attempt, during OFF mode, to dispense water, will bring the unit out of energy mode. The system will revert to the energy mode setting after 30 minutes of non use.


LCD Screen operation - Section G

Safety

Boiling Only Models

To set the safety using the touch screen:

1. Press the [MENU] button for main menu.
2. Press the [Setting] button.
3. Press the [Safety] button.
4. Press button (B) to Enable / Disable, the safety lock feature on the tap.

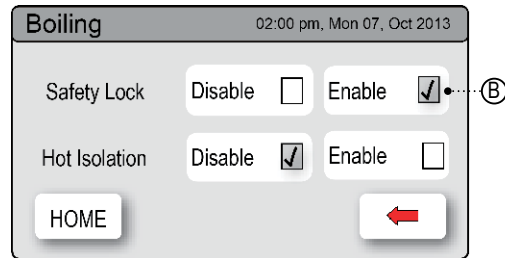


NOTE: When Disabled, boiling water may be dispensed from the Hydrotap by pressing a Red lever.

Boiling Ambient Models

To allow the safety setting to be changed using the tap top controls: (Classic, Elite & AIO)

1. Press the [MENU] button for main menu.
2. Press the [Setting] button.
3. Press the [Safety] button.
4. Press button (A) to allow the safety setting to be changed on the tap.

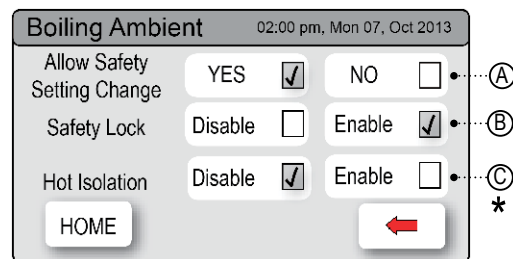

To Enable or Disable the safety on the tap

5. Press button (B) to select Enable / Disable

Note: * Hot Isolation - Not available for the HydroTap Arc/Cube Tap.
Do not enable this function for the HydroTap Arc/Cube.


Hot Isolation: (Not available for HydroTap Arc/Cube) *

The HydroTap is equipped with a safety mode that allows for additional safety protection, if needed.



When activated, the HOT Isolation mode will override the settings to ensure Boiling water is not dispensed.

LCD Screen operation - Section G

To Activate Hot Isolation:

- Press button - to Enable / Disable Hot isolation.
- To operate the tap when in Hot Isolation mode, tap the Safety Lock (3) three times, after a few seconds the tap lights will flash (3) three times. This confirms de-activation and allows Boiling water to be dispensed . The Hot Isolation can be immediately set again, by tapping the safety lock (3) times.
- If the Hot Isolation is not re-enabled, it will be automatically re-enabled after 30 seconds of inactivity.

Dispense Times

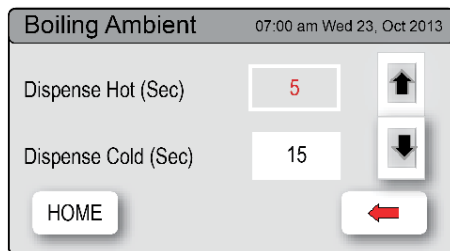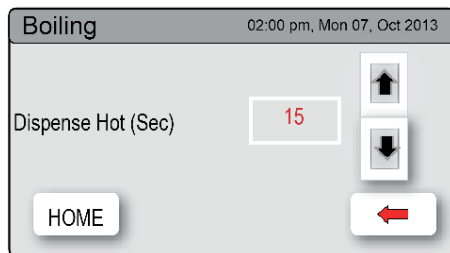

The ability to change the maximum dispensing time for both the Hot and Ambient water has been introduced. The default settings for the maximum dispensing times is 15 seconds. Here, the operator may change both the Hot and Ambient dispensing times to between 5 and 15 seconds, in increments of 1 second. To edit the dispensing times:

1. Press the [MENU] button for main menu.
2. Press the [Setting] button.
3. Press the [Dispense Time] button.
4. Select the option to change and scroll using the up and down arrow Keys


Filter Maintenance

Water Filter

The Zenith HydroTap notifies when filter replacement is due. If you notice one of the following, you will need to change the filter:


- The Change Filter light will flash white once a second and remain so until reset. A filter status light is located below the Chilled Blue Lights on the tap head assembly.
- The filter percentage will change to 0% on the screen.

Note: Depending on local water quality conditions and usage, the filter may require changing anywhere from 500 Ltrs to 10000 Ltrs. You may also need to replace the filter if you notice unpleasant odours or tastes.

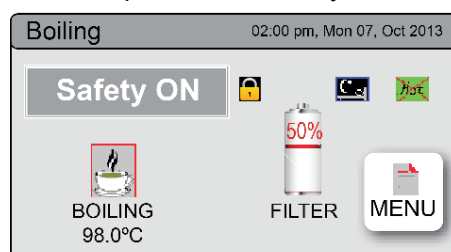

Some water may drip from the filter head (socket) during replacement. Keep a towel handy to dry up any drips.

Filter Maintenance

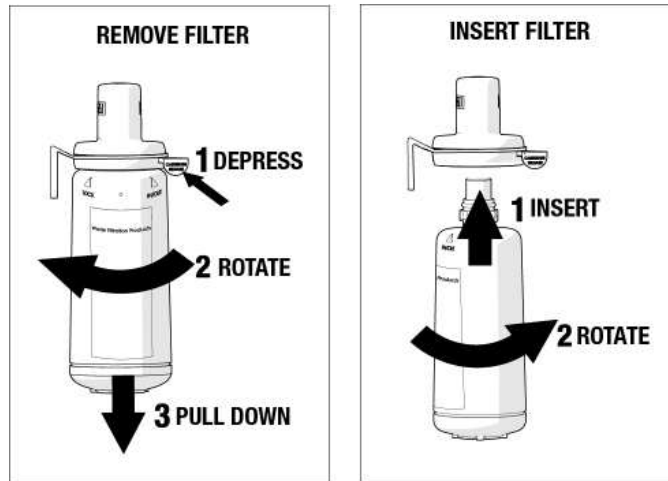

To change the Filter: (See also Section C)

1. Open the door of the under sink unit.
2. Relieve system pressure via the filter flush stop cock, a quick open and close will do. Use the bucket to catch the discharge.
3. Grasp filter cartridge, depress the red lever at the top right of the filter and rotate the cartridge a quarter turn to the left, then gently pull down.
4. **Caution:** a small amount of water will drip as the cartridge is removed.
5. Do not tilt the cartridge as water may spill from it if tilted.
6. Unpack replacement cartridge and remove sanitary cap, write today's date where shown on the label.
7. Avoid touching the filter O-rings and filter opening as this may cause bacterial contamination of the cartridge.
8. Moisten the O-rings with water, align the front cartridge label to the left (as shown in the "insert filter" diagram for filter cartridge replacement), and push the new cartridge into the filter head.
9. Turn the cartridge a quarter turn to the right until the cartridge comes to complete stop and is locked into position, with the front label facing forward.
10. Initiate the filter flush programme by scrolling through the menu screen (See section C).
11. When completed, wipe up any spills and dispose of spent filter cartridge and packaging thoughtfully.
12. Close the door to secure the appliance.
13. Adjust the filter settings in Section G - filter - Litres and Days used.

Warning: If the Zenith HydroTap is switched off for a long period of time (e.g. More than a weekend), run water through the chilled water outlet for at least 5 minutes before consumption.

Cleaning

General cleaning

Do not use strong, corrosive, spray or abrasive cleaners. Clean with a soft damp cloth and mild soap.

Under sink units must never be located near, or cleaned with water jets.

Avoid using air borne pesticides near the undersink unit.

Home Menu Icons




Safety switch is LOCKED.

The HydroTap will not dispense any Boiling water. See page 2 and 3 for safety switch operation




Safety switch is UNLOCKED.

Boiling water may be dispensed. See pages 6 & 7 for tap operation details

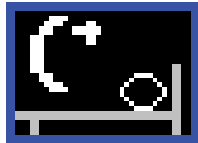

Sleep mode is active.

There are 7 sleep mode options which display this icon on the home screen. See page 18 for details.

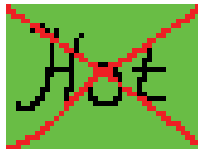

Heater is in OFF mode.

When this icon is displayed, no power is being supplied to the heating element. See pages 18 and 19 for Energy Mode options.



Filter use.

This icon displays the filter usage remaining from 100% (New filter) to 0% (end of life). When it reaches 0% the filter warning light on the tap head will flash slowly.

The filter life can be adjusted by litres and by days used. See pages 17 -18



Boiling Temperature

The temperature of the water in the Boiling tank will be displayed. This is optimised at 98°C but may be adjusted between 68° - 100°. See page 17 for hot set point adjustment.

BOILING
98°C

Contact Details

Head Office

Zenith Heaters Limited,
IRD No. 95 640 729
Unit 2/15 Moselle Avenue,
Henderson.
Auckland. 0610
New Zealand.

Website: www.zenithheaters.co.nz

Int. Phone: +(64 9) 838 8612
Telephone: 0800 558055
Facsimile: 0800 559055

As Zenith policy is one of continuous product improvement, changes to specifications may be made without prior notice. Images in this booklet have been modified and may not be true representations of the finished goods.

The terms “Zenith” and “HydroTap” are registered trade marks of Zip Heaters (Aust) Pty Ltd.

Zenith products described in this publication are manufactured under one or more of the following patents: AU675601, AU637412, AU635979, GB0422305, GB2065848, US4354049, US5103859, US5099825 and SA2006/08043. Other patents are in force and patent applications are pending.



zenith^o