# **Product Disclaimer**

This appliance must only be used for the purpose which it was designed. All other uses must be considered to be potentially dangerous.

Zip Ltd accepts no responsibility for any damage or injury to property or persons caused by improper, incorrect or unreasonable use.



SilentDry
Installation Guide



For all warranty enquiries on this product contact:



Zip Heaters (Aust) Pty Ltd ABN46000578727 67 Allingham Street, Condell Park NSW 2200 AUSTRALIA

> Phone 02 9796 3100 Fax 02 9796 3858 Free Call 1800 638 633

Congratulations on choosing Zip!

Warm Air Hand Dryers for your Washroom requirements

For best results simply follow these simple instructions.

# **Planning**

We suggest that one hand dryer be installed for every two hand basins.

The SilentDry hand dryer should NOT be installed over bench tops or reflective surfaces.

When positioning dryers take note of traffic flows in the washroom, also be aware of obstructing doors, cabinets etc.

### **Electrical Connection**


The appliance must be positioned so that the plug is accessible.

Fasten the dryer to the wall using the four screws and 6mm masonry anchors supplies.

Electrical connection should be made by either using the 1 metre flex and plug supplied of fixed wiring in accordance with SAA wiring rules.

A fixed wiring should incorporate a switch or breaker with a contact separation of at least 3mm in all poles.


Installation may be permitted in area 2 and 3 due to class II and IP23 rating as long as the whole electrical circuit is protected by an earth leakage breaker with a maximum sensitivity of 30ma.

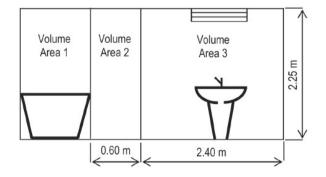

## **Installation Instructions**

NOTE: Dryer should not be installed within 500mm of a bench top or reflective surface.

- Remove cover by firstly loosening the two screws at top of cover using allen key supplied.
- 2. Pull top of cover away from back plate and push down and out to remove.
- 3. Pass power supply cable through hole in back plate.
- 4. Position back plate on wall as per mounting diagram and securely fasten.

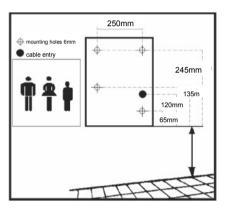

- 5. After terminating cable replace the cover and test operation.
- 6. The sensor sensitivity should be adjusted as required by turning the trim pot at base of machine. Turning anti-clockwise to increase sensitivity (more range), clockwise to decrease (less range).

# **Height recommendations**

Recommended height to bottom of dryer.

Men's washroom		1100mm
Ladies' washroom		1050mm
Children's washroom	13-17yrs	1000mm
Children's washroom	10-13yrs	950mm
Children's washroom	7-10yrs	900mm
Children's washroom	4-7yrs	800mm
Disabled Person's		800mm

### **Maintenance Instructions**

Very little maintenance is required to keep your hand dryer in first class operating order. However, the following maintenance should be carried out six monthly in high traffic areas and twelve monthly in normal traffic areas.

- 1. Disconnect power supply and remove cover
- 2. Carefully clean lint from inside the dryer
- 3. Wash cover in warm soapy water to remove grime

Your guarantee could become void if the above is not performed at the specified intervals.

NOTE: If the power cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, or a suitably qualified person in order to avoid a hazard.

# **Service Hints**

All service work should be carried out by a qualified trades person. Turn off power supply before removing the cover. In event of your hand dryer failing to start, firstly check that the power is available, the sensor lenses are clean and sensor sensitivity has been adjusted.

# Safety Precautions & Standards Compliance

Zip Hand Dryers have been tested and comply with all relevant Australian and New Zealand standards for electrical safety and electromagnetic interference.

#### CAUTION

- The dryer is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not insert objects into the air outlet, doing so can be hazardous and could result in electric shock.
- Do not obstruct the air inlets or outlets in any way.
- Do service your Hand Dryer at regular intervals.